


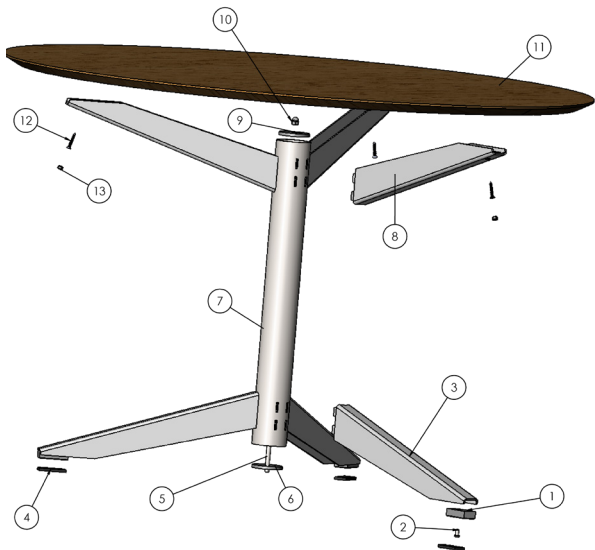

NUMMER	OMSCHRIJVING	HOEEVEELHEID
1	Pootdoppen	3
2	Laagbolschroeven M6x12	3
3	Voetsteunen	3
4	Viltten vloerglijders	3
5	Draadeind M8	1
6	Afsluitring	1
7	Kolom poot - zwart/RVS	1
8	Bladdragers	3
9	Afsluitring	1
10	Dopmoer M8	1
11	Tafelblad TE 06	1
12	Kruiskopschroeven 5.0 x 30	3
13	Afdekkapjes Ø10	3

MONTAGEHANDLEIDING TE 06 EETKAMERTAFEL

Ontwerp: Martin Visser 1960

MONTAGE ONDERSTEL

- Neem de 3 pootdoppen (nr.1) en schroef deze met de 3 bijgeleverde laagbolschroeven (nr. 2) vast in de 3 voetsteunen (nr. 3 - de stalen leggers zonder open gat)
- Neem het draadeind (nr.5) en voorzie deze aan 1 kant van de afsluitring (nr.6) Deze kant gaat gebruikt worden aan de onderzijde van de kolom (nr.7.)
- Haak de 3 voetsteunen, inmiddels voorzien van pootdoppen, in de kolom.
- Steek het draadeind van onder naar boven door de kolom, totdat de afsluitkap tegen de haken van de voetsteunen aan komt. Het frame staat dan op 3 poten.
- Haak de 3 bladdragers (nr.8), herkenbaar aan het schroefgat, in de kolom.
- Schuif de afsluitring (nr.9) over het draadeind totdat deze aan de binnenzijde op de 3 haken rust.
- Schroef de dopmoer (nr.10) vast, gebruik hiervoor de bijgeleverde pijpsleutel. Hiermee klemmen de 3 voetsteunen en de 3 bladdragers zichzelf vast tussen de 2 afsluitringen in.

MONTAGE TAFELBLAD

- Het ronde blad (nr. 11) is voorzien van 3 voor geprikte gaatjes. Leg deze boven de bladdragers.
- Met de bijgeleverde kruiskopschroeven 5.0 x 30 (nr. 12) kan het blad op het onderstel vast geschroefd worden.
- Als het blad is vastgeschroefd kunnen de afdekkapjes (nr.13) gebruikt worden om de schroefgaten van de bladdragers af te dekken.

We wensen u veel plezier van uw tafel!





ASSEMBLY INSTRUCTIONS
TE 06 DINING ROOM TABLE

Design: Martin Visser 1960

ASSEMBLY OF THE FRAME


- Take the 3 foot caps (no. 1) and screw them into the 3 footrests (no. 3 - the steel footrests without an open hole) with the 3 low bulbhead screws (no.2) that were included in the delivery.
- Take the threaded end (no.5) and provide it with the sealing ring (no. 6) on 1 side. This side will be used at the bottom of the tube (no. 7.)
- Hook the 3 footrests (now provided with leg caps) in the stainless-steel/black tube.
- Stick the threaded rod from bottom to top through the tube, until the end cap touches the hooks of the footrests. After this, the frame will stand on 3 legs.
- Hook the 3 table top carriers (no. 8), which are recognizable by the screw hole, into the tube.
- Slide the locking ring (no. 9) over the threaded rod until it rests on the 3 hooks, inside of the tube.
- Screw on the cap nut (no.10) using the pipe wrench provided. This will clamp the 3 footrests and the 3 top carriers to themselves between the 2 locking rings.

ASSEMBLY OF THE TABLE TOP

- The round top (No. 11) has 3 pre-punched holes. Place these above the top carriers.
- Using the supplied crosshead screws 5.0 x 30 (No. 12), screw the top to the base.
- Once the top is screwed down, the cover caps (No. 13) can be used to cover the screw holes of the leaf carriers.

We hope you enjoy your new table!

spectrum

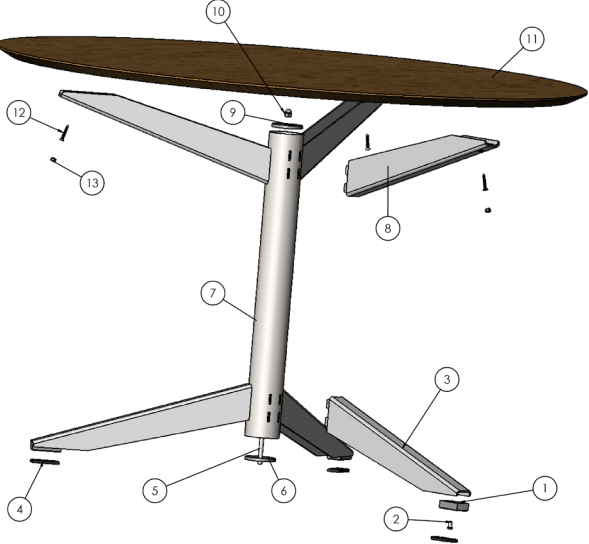

ITEM NO.	DESCRIPTION	QTY
1	Foot caps	3
2	low bulbhead screws M6x12	3
3	Leg	3
4	Felt disc 55x25 mm	3
5	Threaded end	1
6	Sealing ring	1
7	Tube	1
8	Table top carriers	3
9	Locking ring	1
10	Cap nut	1
11	Table top Ø130 cm	1
12	Crosshead screws 5.0 x 30	3
13	Cover caps Ø10	3